



Bulletin #001-2016

RX2500 Head Installation Issues

- 1. Install screws individually into all 6 holes of the head. Based on information provided by some customers it is assumed that some screws would not go in due to thread being striped. If that's the case the best option would be to re-tap them. They are 5-16 x 18 thread.

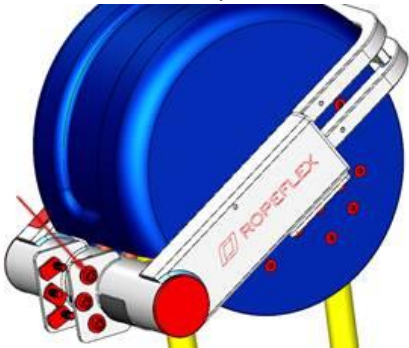

- 2. If all screws go in all the way from # 1 above, please take a photo of the view similar in illustration below to ensure hole alignment

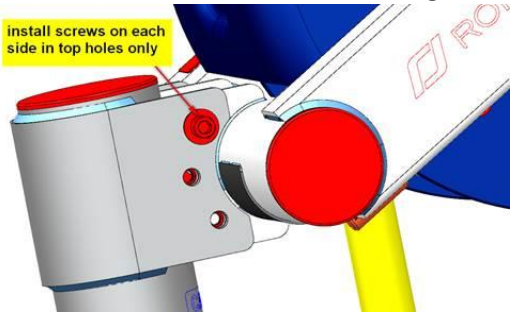

- 3. Following illustration in #2 above please install 2 screws as shown (one on each side) and use the head as a lever to tilt and align holes

